User manual of Hygrothermograph

> Product Specification

Temperature Measuring Range:-50°C∼+70°C(-58°F-+158°F)
Temperature Measuring Accuracy: ±1°C(1.8°F)
Temperature Resolution:0.1°C(0.2°F)
Humanity Measuring Range:10°RRH-99%RH
Humanity Measuring Accuracy: ±5°RH
Humanity Resolution:1%

Used Battery:AAA1.5V

➤ Basic Function
Temperature/Humidity Display
C/°F Temperature Switch Display
Maximum/Minimum Temperature and Humidity Memory
Function
12/24 Hourly Clock
Hourly Chime Function
Daily Alarm Function

Calendar Display Function Operation Method

- Burst through battery door according to indicated direction in product back and take out separator, and then put this bat tery door in back, this product just can be used.
- 2. Key Function: [MODE] is to switch clock and alarm clock display modes and set current time, alarm time, 12 or 24 hourly system and date: [ADJ] is to adjust values of setitems; [MEM ORY] is to display maximum & minimum hum idity and tem perature values in me mory, and remove memorized maximum&minimum temperature and humidity values; [7C/ °F] is to switch temperature unit to display temperature in 'C (degree Celsius) or in 'F (degree Fahrenheit); [RESET] is to remove all set/memorized values, and get back original state.

- 3.Under original state,press[Mode]key for 2 seconds to make minute value in current time begin to twinkle,and press[ADJ] key to adjust minute number,and cont inuously press[MODE] key to respectively set "Clock", "2/24", "Month(M)" and "Day(D)"
- 4. Under curent clock mode(two points between clockand min ute twinte one time perminute), press[MODE]on time to switch display as clock mode(two pointsbetween clock and minute don't twinkle), and now press[ADJ]key to witch on and off of "Quarter Bell (Alarm)"function/"hourly chime"
- (*)))function.Press[MODE]key for another two seconds to setalarm time, and meanwhile, start "Houly Chime"function, sign(*)))appears.
- 5. Under alarm clock mode, automatically get back current clock in one minute in case of no any operatiop and press [ADJ]key one time to switch to calendar display, and auto matically re turn to current clock after three seconds; press MAX/MIN key to display maximun value of tem perature/humidity since last clear(CLEAR).
- 6.Press [MEMORY]key to display memorized maximum (MAX)and minimum(MIN)values of temperature/humidity, and press[MEMORY]key for more than two seconds to mem orized maximum/minimum value.

> Notice

- please press one time the [RESET] key (in product's back) when using or replacing battery for first time;
- Please press one time the [Reset]key in case of this product happening any mistakes;
- Please put the exhausted battery in back position de signed by government.