 


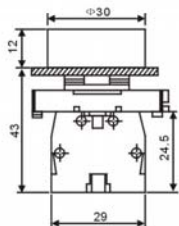


平鈕
Even button
spring return

- LA139M-EA11 常開 NO
- LA139M-EA21 常開 NO
- LA139M-EA31 常開 NO
- LA139M-EA42 常閉 NC
- LA139M-EA51 常開 NO
- LA139M-EA61 常開 NO
- LA139M-EA25 常開+常閉 NO+NC
- LA139M-EA35 常開+常閉 NO+NC
- LA139M-EA45 常開+常閉 NO+NC




帶標記的平鈕
Even button
spring return
With symbol logo

 - LA139M-EA3311 常開 NO
 - LA139M-EA3361 常開 NO
 - LA139M-EA3341 常開 NO
 - LA139M-EA3351 常開 NO
 - LA139M-EA4322 常閉 NC
 -
 - LA139M-EA4342 常閉 NC
 - LA139M-EA5331 常開 NO
 - LA139M-EA5321 常開 NO
- Stop
- Start
- Start

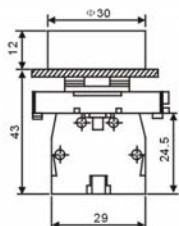


帶防護罩鈕
Button with
protective cover
防護等級IP65
Degree of
protection IP 65

 - LA139M-EP11 常開 NO
- LA139M-EP21 常開 NO
- LA139M-EP31 常開 NO
- LA139M-EP42 常閉 NC
- LA139M-EP51 常開 NO
- LA139M-EP61 常開 NO

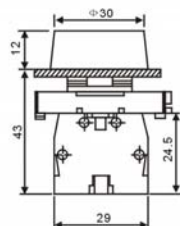


高鈕
Protruding
button

 - LA139M-EL21 常開 NO
- LA139M-EL31 常閉 NC
- LA139M-EL42 常開 NO
- LA139M-EL51 常開 NO
- LA139M-EL61 常開 NO

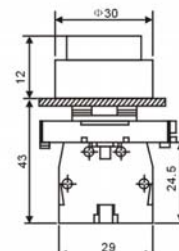

帶標記的高鈕
Protruding button
spring return
With symbol logo

 
- LA139M-EL3311 常開 NO
 - LA139M-EL3361 常開 NO
 - LA139M-EL3341 常開 NO
 - LA139M-EL3341 常開 NO
 - LA139M-EL4322 常閉 NC
 -
 - LA139M-EL4342 常閉 NC
- Stop

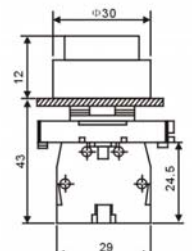




旋鈕
Standard handle knob

 - LA139M-ED21
常開 NO
二位鎖定 2-position locked
- LA139M-ED25
常開+常閉 NO+NC
二位鎖定 2-position locked
- LA139M-ED33
2常開 NO+NO
三位鎖定 3-position locked
- LA139M-ED41
常開 NO
二位復位 2-position reset
- LA139M-ED45
常開 NO
二位復位 2-position reset
- LA139M-ED53
2常開 NO+NO
三位復位 3-position reset

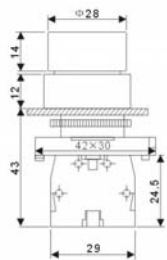

長柄旋鈕
Long handle knob

 
- LA139M-EJ21
常開 NO
二位鎖定 2-position locked
- LA139M-EJ25
常開+常閉 NO+NC
二位鎖定 2-position locked
- LA139M-EJ33
2常開 NO+NO
三位鎖定 3-position locked
- LA139M-EJ41
常開 NO
二位復位 2-position reset
- LA139M-EJ45
常開 NO
二位復位 2-position reset
- LA139M-EJ53
2常開 NO+NO
三位復位 3-position reset

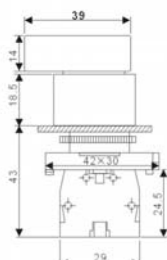

鑰匙鈕
Key button


- LA139M-EG21
常開 NO
二位鎖定 2-position locked
- LA139M-EG25
常開+常閉 NO+NC
二位鎖定 2-position locked
- LA139M-EG03
2常開 NO+NO
三位鎖定 3-position locked
- LA139M-EG33
2常開 NO+NO
三位鎖定 3-position locked
- LA139M-EG41
常開+常閉 NO+NC
二位復位 2-position reset
- LA139M-EG45
常開+常閉 NO+NC
二位復位 2-position reset
- LA139M-EG53
2常開 NO+NO
三位復位 3-position reset

 *注: 表示鑰匙拔出位置
Key position removal

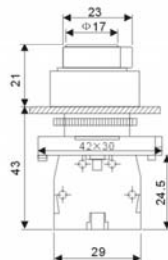


雙頭按鈕
Double end button

 - LA139M-EL8325
常開+常閉 NO+NC
- LA139M-EL8425
常開+常閉 NO+NC

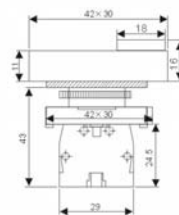

帶燈雙頭鈕
Double end button with lamp

 - LA139M-EW8365
常開+常閉 NO+NC
直接式 Directness
- LA139M-EW8465
常開+常閉 NO+NC
直接式 Directness
- LA139M-EW8375
常開+常閉 NO+NC
電阻式 Resistance
- LA139M-EW8475
常開+常閉 NO+NC
電阻式 Resistance

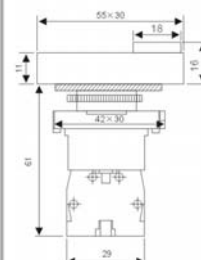




指示燈
Indicator light


130V
220/240V
50/60Hz

 - LA139M-EV61
直接式 Directness
- LA139M-EV63
直接式 Directness
- LA139M-EV64
直接式 Directness
- LA139M-EV65
直接式 Directness
- LA139M-EV66
直接式 Directness
- LA139M-EV71
電阻式 Resistance
- LA139M-EV73
電阻式 Resistance
- LA139M-EV74
6-380V
電阻式 Resistance
- LA139M-EV75
220V
電阻式 Resistance
- LA139M-EV76
電阻式 Resistance

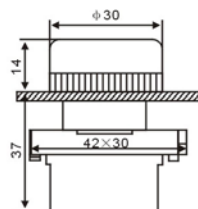


蘑菇頭自復
Mushroom button
spring return

 - LA139M-EC21
φ 40 常開 NO
- LA139M-EC31
φ 40 常開 NO
- LA139M-EC42
φ 40 常閉 NC
- LA139M-EC51
φ 40 常開 NO
- LA139M-ER21
φ 60 常開 NO
- LA139M-ER31
φ 60 常開 NO
- LA139M-ER42
φ 60 常閉 NC
- LA139M-ER51
φ 60 常開 NO

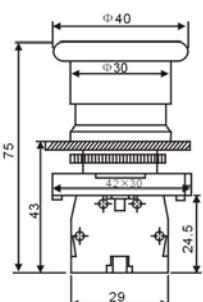


蘑菇頭自鎖
Mushroom
rotation auto-reset
emergency button

 - LA139M-ES442
φ 30 常閉 NC
- LA139M-ES542
φ 40 常閉 NC
- LA139M-ES642
φ 60 常閉 NC

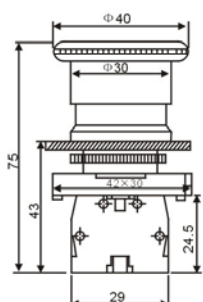


蘑菇頭推拉式
Push and pull
type emergency
button

 - LA139M-ET42
φ 40 常閉 NC
- LA139M-ET845
常開+常閉NO+NC
φ 40

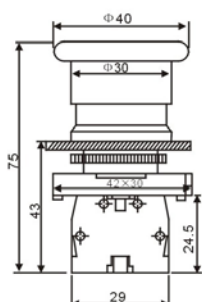

蘑菇頭鑰匙鎖
Mushroom
rotation auto-reset
emergency button
with key

 - LA139M-ES142
φ 40 常閉 NC
- LA139M-ES8445
常開+常閉NO+NC
φ 40

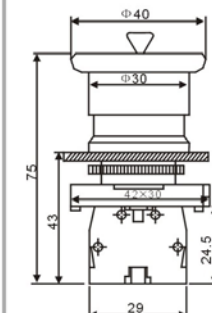




帶燈按鈕
Even button
with lamp
直接式
Directness

220V-240V

 
- LA139M-EW3161 常開 NO
- LA139M-EW3361 常開 NO
- LA139M-EW3462 常閉 NC
- LA139M-EW3561 常開 NO
- LA139M-EW3661 常開 NO

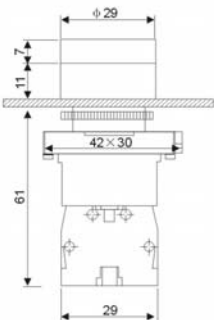

帶燈按鈕
Even button
with lamp
電阻式
Resistance


220V-240V

 - LA139M-EW3171 常開 NO
- LA139M-EW3371 常開 NO
- LA139M-EW3472 常閉 NC
- LA139M-EW3571 常開 NO
- LA139M-EW3671 常開 NO

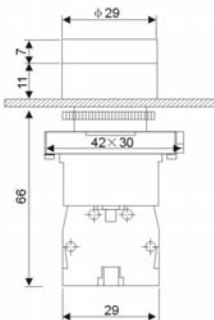


指示燈
Indicator light
變壓器式
Transformer

 - LA139M-EV41 220V/50Hz
- LA139M-EV43 220V/50Hz
- LA139M-EV44 220V/50Hz
- LA139M-EV45 220V/50Hz
- LA139M-EV46 220V/50Hz
- LA139M-EV53 380V/50Hz
- LA139M-EV54 380V/50Hz
- LA139M-EV55 380V/50Hz

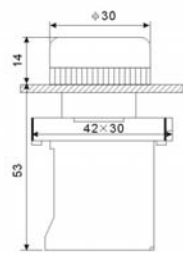


帶燈按鈕
Even button
with lamp
變壓器式
Transformer

 - LA139M-EW3141 220V 常開 NO
- LA139M-EW3341 220V 常開 NO
- LA139M-EW3442 220V 常閉 NC
- LA139M-EW3541 220V 常開 NO
- LA139M-EW3151 380V 常開 NO
- LA139M-EW3351 380V 常開 NO
- LA139M-EW3452 380V 常閉 NC
- LA139M-EW3551 380V 常開 NO

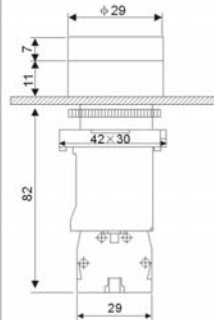

帶燈雙頭鈕
Double end button
with lamp
變壓器式
Transformer

 
- LA139M-EW8345 常開+常閉 NO+NC
- LA139M-EW8445 常開+常閉 NO+NC

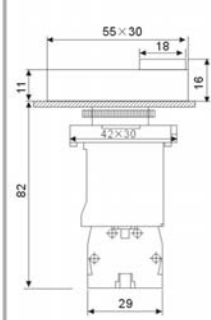




平鈕
Even button
spring return

 - LA139M-BA11 常開 NO
- LA139M-BA21 常開 NO
- LA139M-BA31 常開 NO
- LA139M-BA42 常閉 NC
- LA139M-BA51 常開 NO
- LA139M-BA61 常開 NO
- LA139M-BA25 常開+常閉NO+NC
- LA139M-BA35 常開+常閉NO+NC
- LA139M-BA45 常開+常閉NO+NC

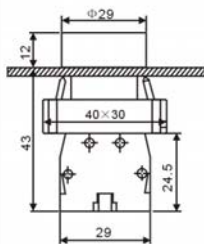


帶標記的平鈕
Even button
spring return
With symbol logo

 - LA139M-BA3311 常開 NO
- LA139M-BA3361 常開 NO
- LA139M-BA3341 常開 NO
- LA139M-BA3351 常開 NO
- LA139M-BA4322 常閉 NC
- Stop
- LA139M-BA5331 常開 NO
- LA139M-BA5321 常開 NO

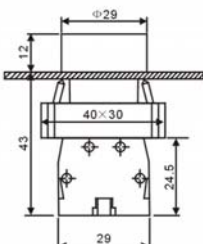


帶防護罩鈕
Button with
protective cover
防護等級IP65
Degree of
protection IP 65

 - LA139M-BP11 常開 NO
- LA139M-BP21 常開 NO
- LA139M-BP31 常開 NO
- LA139M-BP42 常閉 NC
- LA139M-BP51 常開 NO
- LA139M-BP61 常開 NO

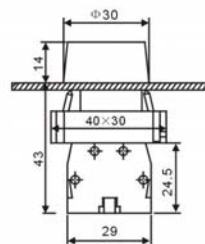


高鈕
Protruding
button

 - LA139M-BL21 常開 NO
- LA139M-BL31 常閉 NC
- LA139M-BL42 常開 NO
- LA139M-BL51 常開 NO
- LA139M-BL61 常開 NO

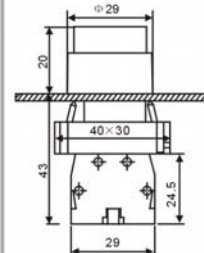

帶標記的高鈕
Protruding button
spring return
With symbol logo

 
- LA139M-BL3311 常開 NO
- LA139M-BL3361 常開 NO
- LA139M-BL3341 常開 NO
- LA139M-BL3341 常開 NO
- LA139M-BL4322 常閉 NC
- Stop
- LA139M-BL4342 常閉 NC

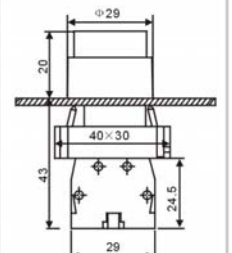




旋鈕
Standard handle knob

 - LA139M-BD21
常開 NO
二位鎖定 2-position locked
- LA139M-BD25
常開+常閉 NO+NC
二位鎖定 2-position locked
- LA139M-BD33
2常開 NO+NO
三位鎖定 3-position locked
- LA139M-BD41
常開 NO
二位復位 2-position reset
- LA139M-BD45
常開 NO
二位復位 2-position reset
- LA139M-BD53
2常開 NO+NO
三位復位 3-position reset

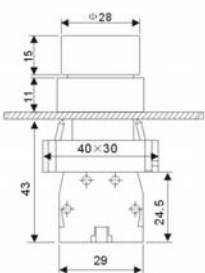

長柄旋鈕
Long handle knob

 
- LA139M-BJ21
常開 NO
二位鎖定 2-position locked
- LA139M-BJ25
常開+常閉 NO+NC
二位鎖定 2-position locked
- LA139M-BJ33
2常開 NO+NO
三位鎖定 3-position locked
- LA139M-BJ41
常開 NO
二位復位 2-position reset
- LA139M-BJ45
常開 NO
二位復位 2-position reset
- LA139M-BJ53
2常開 NO+NO
三位復位 3-position reset

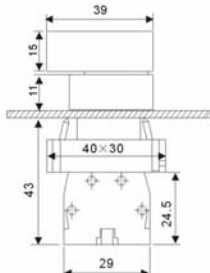

鑰匙鈕
Key button


- LA139M-BG21
常開 NO
二位鎖定 2-position locked
- LA139M-BG25
常開+常閉 NO+NC
二位鎖定 2-position locked
- LA139M-BG03
2常開 NO+NO
三位鎖定 3-position locked
- LA139M-BG33
2常開 NO+NO
三位鎖定 3-position locked
- LA139M-BG41
常開+常閉 NO+NC
二位復位 2-position reset
- LA139M-BG45
常開+常閉 NO+NC
二位復位 2-position reset
- LA139M-BG53
2常開 NO+NO
三位復位 3-position reset

 *注: 表示鑰匙拔出位置
Key position removal

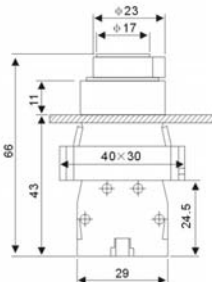


雙頭按鈕
Double end button

 - LA139M-BL8325
常開+常閉 NO+NC
- LA139M-BL8425
常開+常閉 NO+NC

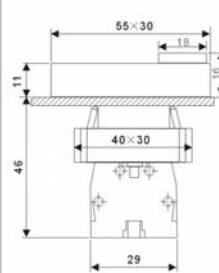

帶燈雙頭鈕
Double end button with lamp

 
- LA139M-BW8365
常開+常閉 NO+NC
直接式 Directness
- LA139M-BW8465
常開+常閉 NO+NC
直接式 Directness
- LA139M-BW8375
常開+常閉 NO+NC
電阻式 Resistance
- LA139M-BW8475
常開+常閉 NO+NC
電阻式 Resistance

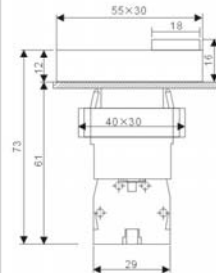




指示燈
Indicator light
130V
220/240V
50/60Hz

 - LA139M-BV61
直接式 Directness
- LA139M-BV63
直接式 Directness
- LA139M-BV64
直接式 Directness
- LA139M-BV65
直接式 Directness
- LA139M-BV66
直接式 Directness
- LA139M-BV71
電阻式 Resistance
- LA139M-BV73
電阻式 Resistance
- LA139M-BV74
6-380V
電阻式 Resistance
- LA139M-BV75
220V
電阻式 Resistance
- LA139M-BV76
電阻式 Resistance

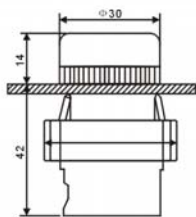


蘑菇頭自復
Mushroom button
spring return

 - LA139M-BC21
φ 40 常開 NO
- LA139M-BC31
φ 40 常開 NO
- LA139M-BC42
φ 40 常閉 NC
- LA139M-BC51
φ 40 常開 NO
- LA139M-BR21
φ 60 常開 NO
- LA139M-BR31
φ 60 常開 NO
- LA139M-BR42
φ 60 常閉 NC
- LA139M-BR51
φ 60 常開 NO

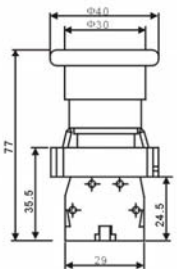


蘑菇頭自鎖
Mushroom
rotation auto-reset
emergency button

 - LA139M-BS442
φ 30 常閉 NC
- LA139M-BS542
φ 40 常閉 NC
- LA139M-BS642
φ 60 常閉 NC

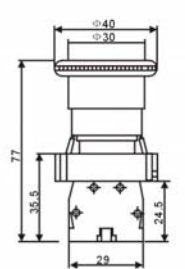


蘑菇頭推拉式
Push and pull
type emergency
button

 - LA139M-BT42
φ 40 常閉 NC
- LA139M-BT845
常開+常閉NO+NC
φ 40

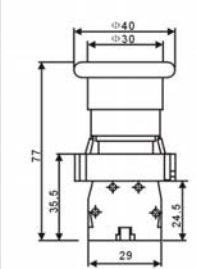

蘑菇頭鑰匙鎖
Mushroom
rotation auto-reset
emergency button
with key

 - LA139M-BS142
φ 40 常閉 NC
- LA139M-BS8445
常開+常閉NO+NC
φ 40

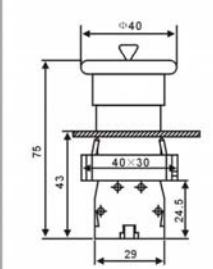




帶燈按鈕
Even button
with lamp
直接式
Directness

220V-240V

 
- LA139M-BW3161
常開 NO
- LA139M-BW3361
常開 NO
- LA139M-BW3462
常閉 NC
- LA139M-BW3561
常開 NO
- LA139M-BW3661
常開 NO

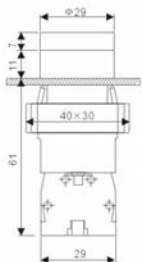

帶燈按鈕
Even button
with lamp
電阻式
Resistance


220V-240V

 - LA139M-BW3171
常開 NO
- LA139M-BW3371
常開 NO
- LA139M-BW3472
常閉 NC
- LA139M-BW3571
常開 NO
- LA139M-BW3671
常開 NO

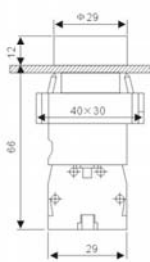


指示燈
Indicator light
變壓器式
Transformer

 - LA139M-BV41
220V/50Hz
- LA139M-BV43
220V/50Hz
- LA139M-BV44
220V/50Hz
- LA139M-BV45
220V/50Hz
- LA139M-BV46
220V/50Hz
- LA139M-BV53
380V/50Hz
- LA139M-BV54
380V/50Hz
- LA139M-BV55
380V/50Hz

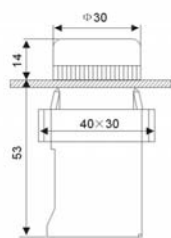


帶燈按鈕
Even button
with lamp
變壓器式
Transformer

 - LA139M-BW3141
220V 常開 NO
- LA139M-BW3341
220V 常開 NO
- LA139M-BW3442
220V 常閉 NC
- LA139M-BW3541
220V 常開 NO
- LA139M-BW3151
380V 常開 NO
- LA139M-BW3351
380V 常開 NO
- LA139M-BW3452
380V 常閉 NC
- LA139M-BW3551
380V 常開 NO

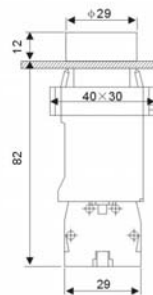

帶燈雙頭鈕
Double end button
with lamp
變壓器式
Transformer

 - LA139M-BW8345
常開+常閉 NO+NC
- LA139M-BW8445
常開+常閉 NO+NC

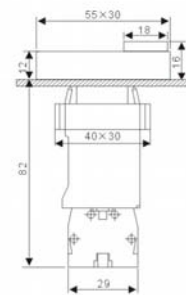



平鈕頭部
Even button
spring return
accessory

- LA139M-BA1
- LA139M-BA2
- LA139M-BA3
- LA139M-BA4
- LA139M-BA5
- LA139M-BA6



高鈕頭部
Protruding
button
accessory

- LA139M-BL2
- LA139M-BL3
- LA139M-BL4
- LA139M-BL5
- LA139M-BL6



帶防護罩鈕頭部
Button with
protective cover
accessory

- LA139M-BP2
- LA139M-BP3
- LA139M-BP4
- LA139M-BP5
- LA139M-BP6



帶燈按鈕頭部
Even button
with lamp
accessory

- LA139M-BW33
- LA139M-BW34
- LA139M-BW35
- LA139M-BW36



旋鈕頭部
Standard handle
knob accessory

- LA139M-BD2
- LA139M-BD3
- LA139M-BD4
- LA139M-BD5



帶標記的平鈕頭部
Even button spring
return With symbol
logo accessory

- LA139M-BA331
 - LA139M-BA336
 - LA139M-BA334
 - LA139M-BA335
 - LA139M-BA432
 - LA139M-BA434
- Stop



帶標記的高鈕頭部
Protruding button
spring return
With symbol logo
accessory

- LA139M-BL331
 - LA139M-BL336
 - LA139M-BL334
 - LA139M-BL335
 - LA139M-BL432
 - LA139M-BL434
- Stop



指示燈頭部
Indicator light
accessory

- LA139M-BV03
- LA139M-BV04
- LA139M-BV05
- LA139M-BV06



帶燈旋鈕頭部
Standard handle
knob with lamp
accessory

- LA139M-BK123
- LA139M-BK124
- LA139M-BK125
- LA139M-BK143
- LA139M-BK144
- LA139M-BK145



旋鈕長柄頭部
Long handle
knob accessory

- LA139M-BJ2
- LA139M-BJ3
- LA139M-BJ4
- LA139M-BJ5



鑰匙鈕頭部
Key button
accessory

LA139M-BG2
LA139M-BG3
LA139M-BG4
LA139M-BG5
LA139M-BG6
LA139M-BG0



雙鍵鈕頭部
Double end button
accessory



LA139M-BL83

LA139M-BL93



蘑菇頭推拉式頭部
Push and pull
type emergency
button accessory

- LA139M-BT4
Φ40
- LA139M-BT2
Φ40
- LA139M-BX4
Φ60
- LA139M-BX2
Φ60



蘑菇自鎖鈕頭部
Mushroom
rotation auto-reset
emergency button
accessory

- LA139M-BS44
Φ30
- LA139M-BS42
Φ30
- LA139M-BS54
Φ40
- LA139M-BS52
Φ40



蘑菇自鎖鈕頭部
Mushroom
rotation auto-reset
emergency button
accessory

- LA139M-BS64
Φ60
- LA139M-BS62
Φ60



蘑菇頭帶鎖頭部
Mushroom
rotation auto-reset
emergency button
with key accessory

- LA139M-BS12
Φ40
- LA139M-BS14
Φ40



雙鍵鈕頭部
Double end button
accessory



LA139M-BL84

LA139M-BL94



雙鍵帶燈鈕頭部
Double end button
with lamp
accessory



LA139M-BW83

LA139M-BW84



蘑菇鈕頭部
Mushroom button
spring return
accessory

- LA139M-BC44
Φ30
- LA139M-BC34
Φ30
- LA139M-BC24
Φ30
- LA139M-BC4
Φ40
- LA139M-BC3
Φ40
- LA139M-BC2
Φ40



蘑菇鈕頭部
Mushroom button
spring return
accessory

- LA139M-BR4
Φ60
- LA139M-BR3
Φ60
- LA139M-BR2
Φ60



平鈕頭部
Even button
spring return
accessory

- LA139M-EA1
- LA139M-EA2
- LA139M-EA3
- LA139M-EA4
- LA139M-EA5
- LA139M-EA6



旋鈕頭部
Standard handle
knob accessory

- LA139M-ED2
- LA139M-ED3
- LA139M-ED4
- LA139M-ED5



蘑菇自鎖鈕頭部
Mushroom
rotation auto-reset
emergency button
accessory

- LA139M-ES44
Φ 30
- LA139M-ES42
Φ 30
- LA139M-ES54
Φ 40
- LA139M-ES52
Φ 40
- LA139M-ES64
Φ 60
- LA139M-ES62
Φ 60



鑰匙鈕頭部
Key button
accessory

- LA139M-EG2
- LA139M-EG3
- LA139M-EG4
- LA139M-EG5
- LA139M-EG6
- LA139M-EG0



帶燈按鈕頭部
Even button
with lamp
accessory

- LA139M-EW33
- LA139M-EW34
- LA139M-EW35
- LA139M-EW36



帶標記的平鈕頭部
Even button spring
return With symbol
logo accessory

- LA139M-EA331
 - LA139M-EA336
 - LA139M-EA334
 - LA139M-EA335
 - LA139M-EA432
 - LA139M-EA434
- Stop



旋鈕長柄頭部
Long handle
knob accessory

- LA139M-EJ2
- LA139M-EJ3
- LA139M-EJ4
- LA139M-EJ5



蘑菇鈕頭部
Mushroom button
spring return
accessory

- LA139M-EC44
Φ 30
- LA139M-EC34
Φ 30
- LA139M-EC24
Φ 30
- LA139M-EC4
Φ 40
- LA139M-EC3
Φ 40
- LA139M-EC2
Φ 40
- LA139M-ER4
Φ 60
- LA139M-ER3
Φ 60
- LA139M-ER2
Φ 60



蘑菇頭帶鎖頭部
Mushroom
rotation auto-reset
emergency button
with key accessory

- LA139M-ES12
Φ 40
- LA139M-ES14
Φ 40



雙鍵鈕頭部
Double end button
accessory

- LA139M-EL83
- LA139M-EL93
- LA139M-EL84
- LA139M-EL94



常開觸點座
NO contact unit

▲ LA139M-BE101
常開NO



帶中板的觸點座
contact unit
with shelf

- ▲ LA139M-EZ101 常開NO
- ▲▲ LA139M-EZ103 常開+常開NO+NO
- ▲▲ LA139M-EZ105 常開+常閉NO+NC
- ▲ LA139M-EZ102 常閉NC
- ▲▲ LA139M-EZ104 常開+常閉NC+NC



燈座
Bottom seat
with lamp
直接式
Directness

LA139M-EV6
LA139M-EW06



燈座
Bottom seat of
button with lamp
直接式
Directness

LA139M-EW061 常開NO
LA139M-EW062 常閉NC
LA139M-EW063 常開+常閉NO+NO
LA139M-EW064 常開+常閉NC+NC
LA139M-EW065 常開+常閉NO+NC



燈座
Bottom seat of
button with lamp
電阻式
Resistance

LA139M-EV7
LA139M-EW071 常開NO
LA139M-EW072 常閉NC
LA139M-EW073 常開+常閉NO+NO
LA139M-EW074 常開+常閉NC+NC
LA139M-EW075 常開+常閉NO+NC



常閉觸點座
NC contact unit

▲ LA139M-BE102
常閉NC



帶中板的觸點座
contact unit
with shelf

- ▲ LA139M-BZ101 常開NO
- ▲▲ LA139M-BZ103 常開+常開NO+NO
- ▲▲ LA139M-BZ105 常開+常閉NO+NC
- ▲ LA139M-BZ102 常閉NC
- ▲▲ LA139M-BZ104 常開+常閉NC+NC



燈座
Bottom seat
with lamp
直接式
Directness

LA139M-BV6
LA139M-BW06



燈座
Bottom seat of
button with lamp
直接式
Directness

LA139M-BW061 常開NO
LA139M-BW062 常閉NC
LA139M-BW063 常開+常閉NO+NO
LA139M-BW064 常開+常閉NC+NC
LA139M-BW065 常開+常閉NO+NC



燈座
Bottom seat of
button with lamp
電阻式
Resistance

LA139M-BV7
LA139M-BW071 常開NO
LA139M-BW072 常閉NC
LA139M-BW073 常開+常閉NO+NO
LA139M-BW074 常開+常閉NC+NC
LA139M-BW075 常開+常閉NO+NC